

DIVISION 6

TABLE OF CONTENTS

SECTION	SUBJECT	PAGES
602	TOPSOIL	
I	GENERAL	602-1
	1.1 DESCRIPTION OF WORK	602-1
	1.2 SUBMITTALS	602-1
II	EXECUTION	602-1
	2.1 PROCEDURES	602-1
	2.2 APPLYING TOPSOIL	602-1
III	MEASUREMENT FOR PAYMENT	602-2
603	SEEDING	
I	GENERAL	603-1
	1.1 DESCRIPTION OF WORK	603-1
	1.2 SUBMITTALS	603-1
II	EXECUTION	603-1 to 603-2
	2.1 PROCEDURES	603-1 to 603-2
	2.2 ESTABLISHMENT AND MAINTENANCE	603-2
	2.3 CLEANUP AND PROTECTION	603-2
III	MEASUREMENT FOR PAYMENT	603-2 to 603-3
604	SODDING	
I	GENERAL	604-1
	1.1 DESCRIPTION OF WORK	604-1
	1.2 SUBMITTALS	604-1
II	EXECUTION	604-1 to 604-2
	2.1 PROCEDURES	604-1 to 604-2
	2.2 CLEANUP AND PROTECTION	604-2
III	MEASUREMENT FOR PAYMENT	604-2
605	PLANTING	
I	GENERAL	605-1
	1.1 DESCRIPTION OF WORK	605-1
	1.2 SUBMITTALS	605-1
II	EXECUTION	605-1 to 605-4
	2.1 PROCEDURES	605-1 to 605-3
	2.2 CARE OF PLANTS	605-3 to 605-4
	2.3 GUARANTEE	605-4
III	MEASUREMENT FOR PAYMENT	605-4 to 605-5

606 ROLLED EROSIONCONTROL PRODUCTS (RECP)

I	GENERAL	
	1.1 DESCRIPTION OF WORK	606-1
	1.2 MATERIALS	606-1
II	EXECUTION	606-1 to 606-2
	2.1 DRAINAGE CHANNEL INSTALLATION	606-1 to 606-2
	2.2 SLOPES INSTALLATION	606-2
III	MEASUREMENT FOR PAYMENT	606-2

608 MOWING

I	GENERAL	608-1
	1.1 DESCRIPTION OF WORK	608-1
II	EXECUTION	608-1
	2.1 GENERAL	608-1
	2.2 EQUIPMENT	608-1
III	MEASUREMENT FOR PAYMENT	608-1 to 608-2